




Asus MeMO Pad 7 ME170C Rear Facing Camera Replacement

This guide will walk you through how to replace the rear facing camera.

Written By: Thomas Brooks

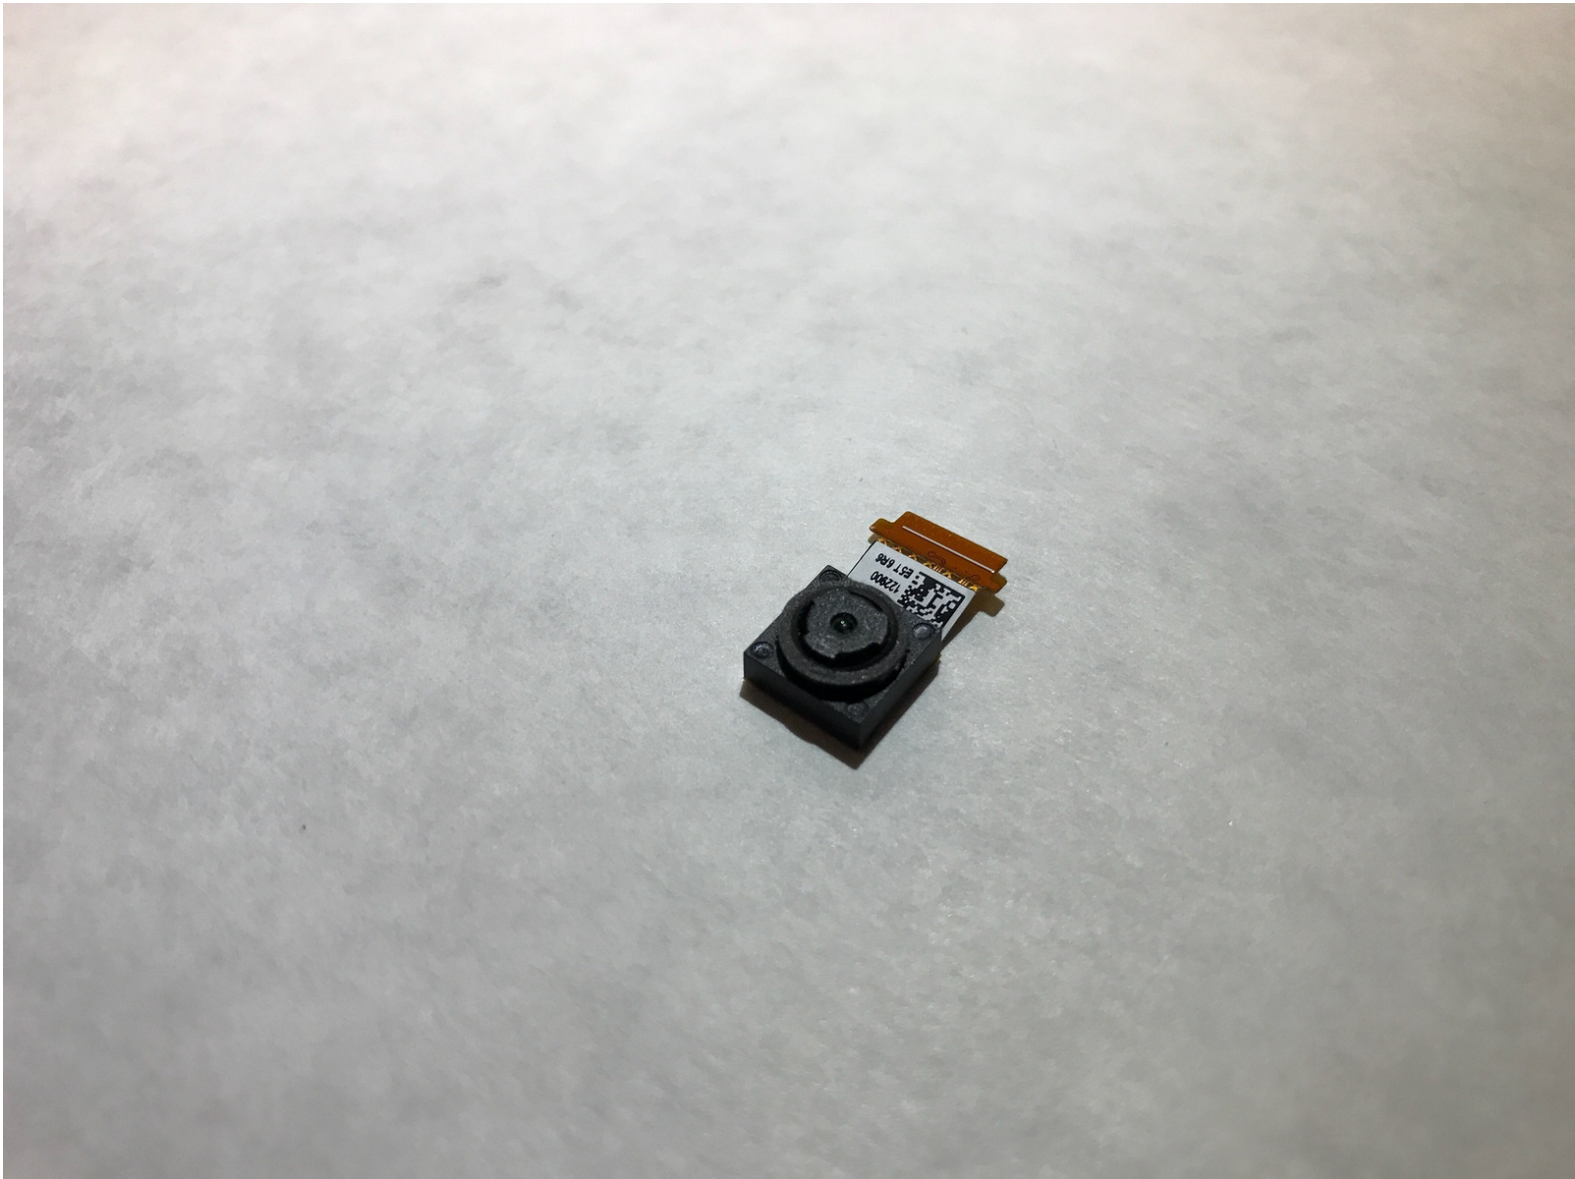

INTRODUCTION


The rear facing camera is used to take photos from the tablets rear orientation. The camera may stop taking photos and videos clearly. This can be replace fairly easily, but the motherboard needs to be removed first.


TOOLS:

- [Jimmy](#) (1)
 - [Tweezers](#) (1)
 - [Metal Spudger](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Motherboard



 **Caution:** Before beginning to disassemble, power off the device.


 **Caution:** Be gentle, excessive force can result in a damaged or cracked screen.

- Using a Jimmy tool, gently wedge it into the device seam.
- Gently pry the Jimmy tool from all around the seam of the device until the back panel gets detached.

Step 2



- Locate the black bundle cable connector attached to the battery.

 **Note:** To avoid breaking any inner pieces, slide in a forward motion and do not push down.


- Using the blue plastic opening tool, gently push the black bundle cable connector until it gets loosened.

Step 3



- Using the plastic opening tool, pry out around the edges of the batteries to loosen it out.
- ⓘ Note: The battery should be laying down freely in its port.
- Lift the battery out of its port.'

Step 4

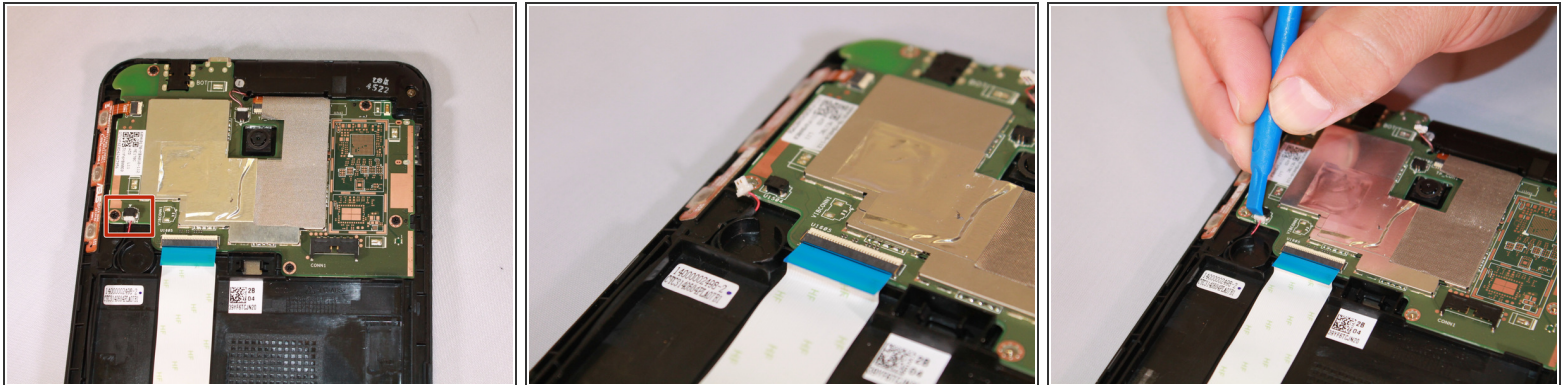


- On the left side of the tablet, locate the white cable connector inserted in a black port on motherboard.
- Using the smallest blue plastic opening tool, slide the white cable box completely out of the port.

Step 5




- Locate the end of the ribbon cable that is attached to the mother board.
- Flip up the clip to loosen the cable. The clip is a beige colored piece of plastic.
 - Using wide nosed tweezers, pinch the blue tab attached to the ribbon cable.
- i** Note: You will have to pull firmly, but do not rip it out.
- Pull the blue tab gently in a lateral motion until it is completely out of its port.

Step 6

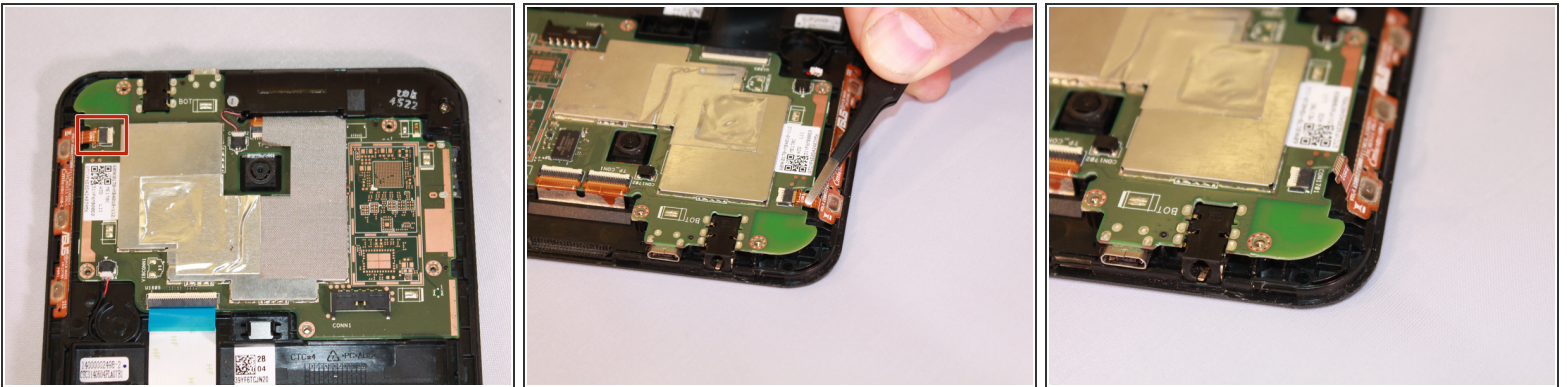


- Locate the orange/copper component that is inserted into the motherboard.
- Using wide nosed tweezers, gently pull out the orange/copper ribbon inserted in the port on the motherboard.

Step 7

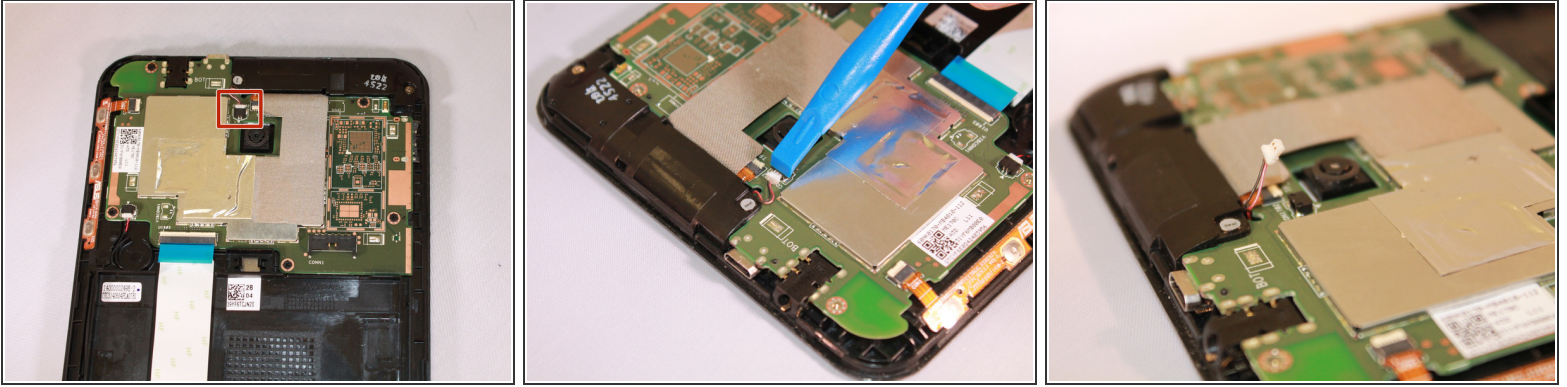


- Locate the white cable connector on top of the tablet. The white cable connector is inserted in a black port on the motherboard.
- Using the blue plastic opening tool, push the white cable connector out of its port in a side to side motion towards the top of the device.

Step 8

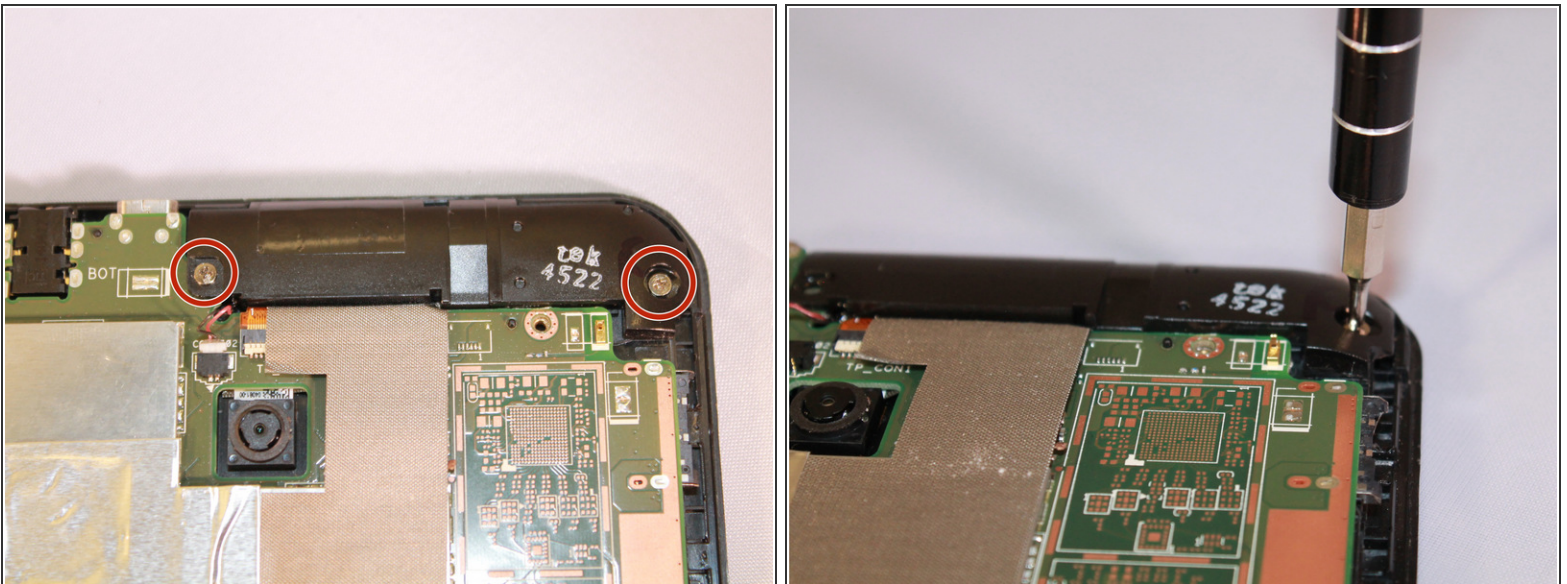




- Locate the screws.
 - With the PH000 Phillips head screwdriver, unscrew the seven screws in a counter clockwise motion until they are loosened up.
- i** Note: Place the screws in a safe place for later use. There should be two silver and five black screws, a total of seven.

Step 9

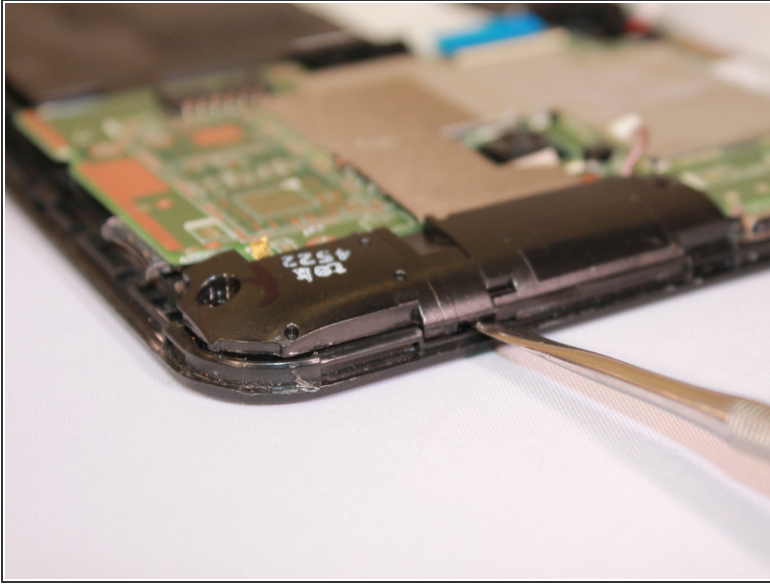


- ⓘ Note: Once the screws are removed, the speaker component will be loosely laying in the track.
- Using a metal spudger tool, remove the speaker by gently lifting the edge of it.

Step 10

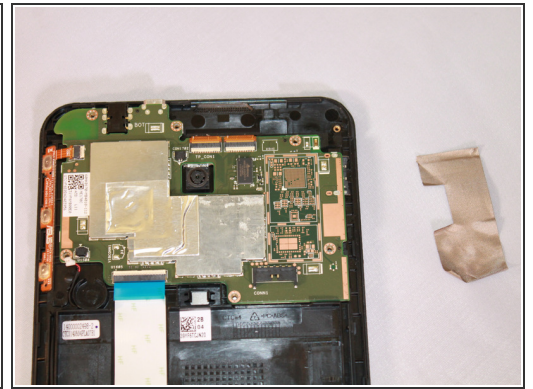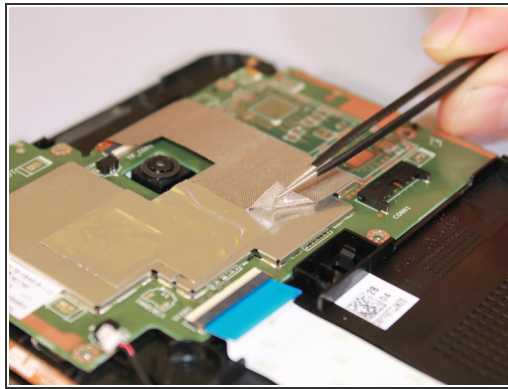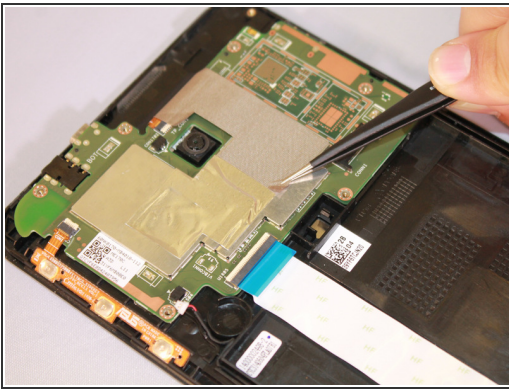

- Remove the silver tape on one corner with needle nosed tweezers. Remove it from the motherboard.
- No edits necessary.
- ⓘ Make this step a note and change the color to separate it from the other steps above.

Step 11

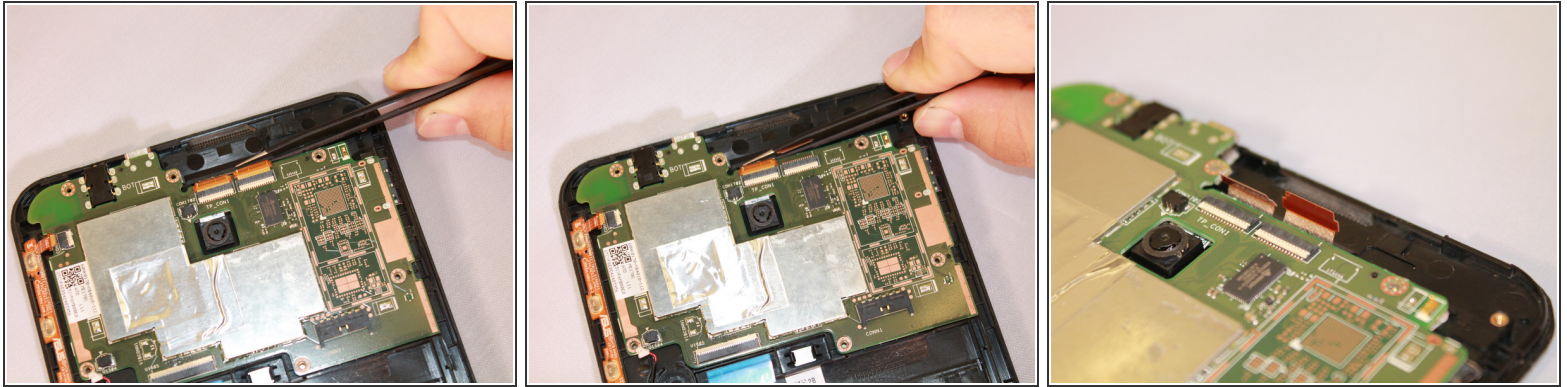


- Using needle nosed tweezers, gently pull both of the orange/copper ribbon cables out of their ports.

Step 12



- Locate the five screws holding the motherboard in place.
 - Using a PH000 Phillips head screwdriver, unscrew all five of the screws in a counter clockwise motion.
- (i)** Note: Place the screws in a secure spot for use later.


Step 13

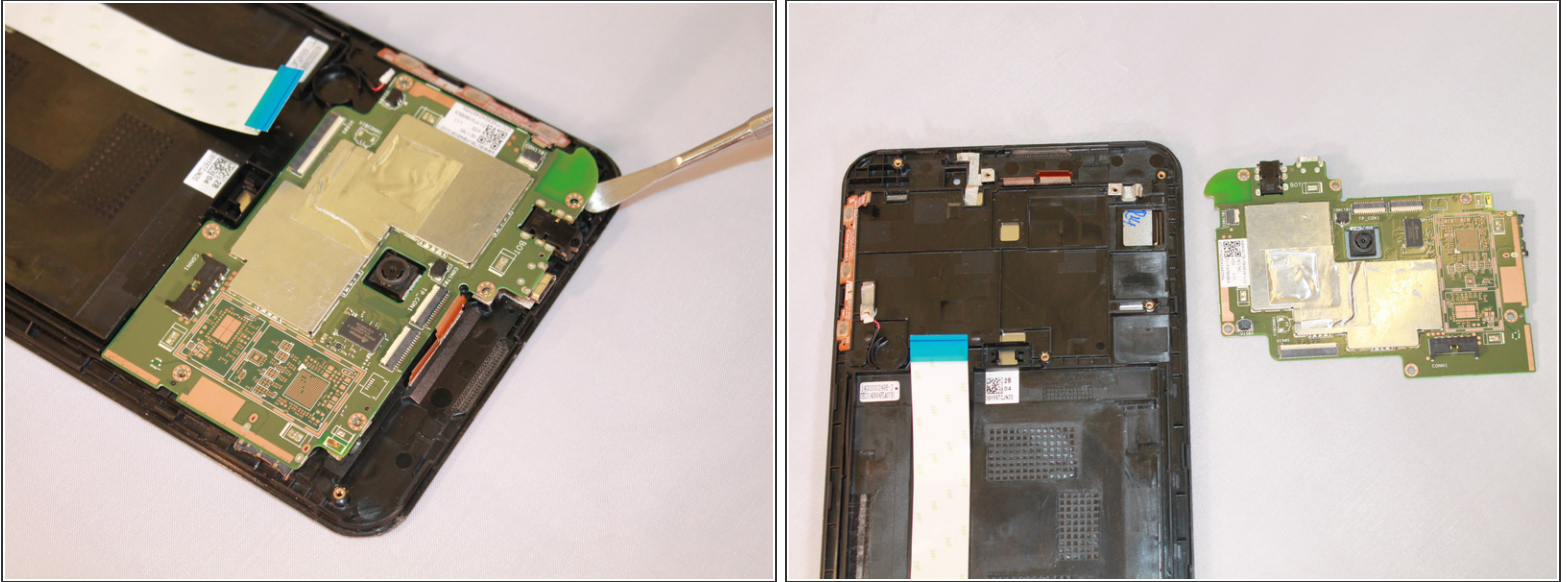

- To uninstall the motherboard, use a prying tool to lift it out of the device.

i Note: The motherboard should be laying freely in its port.

Step 14 — Rear Facing Camera

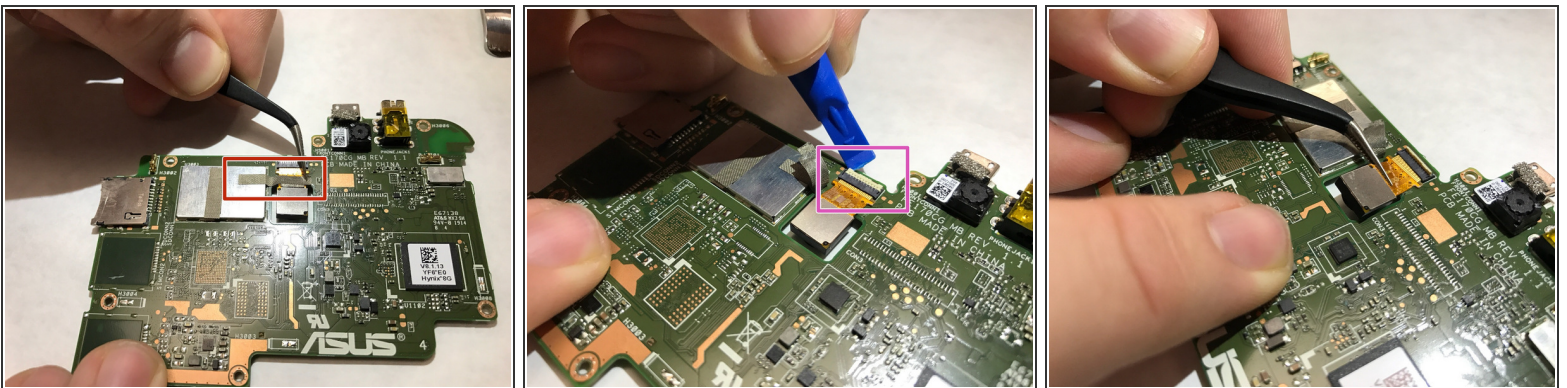

- Gently remove grey tape that is holding down connector for camera using the tweezers.
- When tape is removed, use the plastic prying tool to gently unlock connector between camera wiring and motherboard. The connector lock rotates upward away from motherboard to release.
- Carefully remove camera from motherboard using tweezers by pulling directly upward. Camera should release easily without much resistance.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-19 11:37:27 PM.